## UXR<sup>™</sup>- 175BF

### USHIO UXR™ Series



#### Electrical characteristics (Initial)

| mp power 1            | 75W   |
|-----------------------|-------|
| perating Voltage* 12  | 2.5V  |
| ited lamp current     | 14A   |
| mp current range 12.5 | 5∼16A |
| ted lamp current      | 14A   |

\*Operating current : 14A

#### Operating condition (Power supply)

| Power supply         | Constant current control /<br>Constant power control |  |
|----------------------|--|--|
| Current Ripple ( P-I | P) Max 5%  |  |
| Igniter voltage      | Min AC23kV   |  |
| Supply voltage       | Min 140V   |  |
|                      |  |  |

#### Specifications

| Arc gap [Non-operation] | 1.1mm     |
|-------------------------|-----------|
| Spectral type           | Ozoneless |
| Window diameter         | φ25.4     |
| Reflector               | Parabola  |
| Rated lifetime*         | 500hours  |

\*Visible output (5mm aperture) is reduced to 50% of the initial value.

#### Operating condition (Lamp)


| Operating | direction I | Horizontal direction |
|-----------|-------------|----------------------|
|           | Cermic bod  | y Max 150℃           |
| Cooling   | Base        | Max 200°C            |
| Forced C  | Cooling     | Necessary            |


#### Initial output\* (representative values)


| Radiant output                | 30W    |
|-------------------------------|--------|
| Visible output                | 1900Lm |
| Visible output (5mm aperture) | 950Lm  |
| Color temperature             | 6100K  |

\*Operating current : 14A

#### Appearance

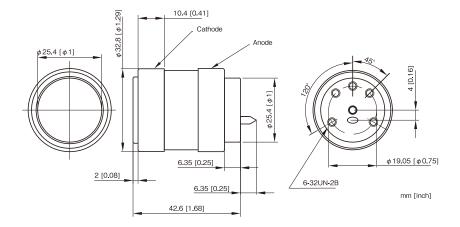

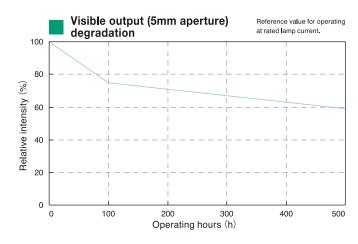

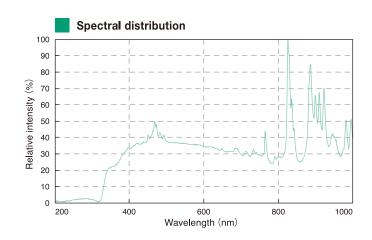

# UXR<sup>TM</sup> - 175BF

#### Safety Instructions



#### **WARNING**



High internal pressure exists in the lamp. Do not apply any excessive shock, stress, or scratch to the lamp while handling. Otherwise the lamp may burst resulting in catastrophic failure.



Lamp should not be operated within 45° of vertical with the window up. Otherwise thermal stress can cause window failure.



Turn off the power before inserting, removing or cleaning the lamp, otherwise it could cause electrical shock.



• High voltage is required for ignition. Do not touch the lamp nor heat sinks during operation, especially in the instant of ignition.



 Do not look directly at the operating lamp. Intense infrared and ultraviolet radiation generated by the lamp can cause skin burns and severe eye damage.



#### CAUTION

- High temperature is built up during operation. Do not touch the lamp during operation and for 10 minutes, at least, after turning off.
- Do not operate the lamp near flammable gas or chemicals.
- Attach heat sinks on both bases and apply forced air cooling. Apply heat conductive grease on both bases sufficiently to obtain appropriate
  cooling condition.
- Lamp must be fixed at the anode base only, leaving cathode base free. Otherwise mechanical and thermal stress may cause explosion. Read all equipment instructions as well.
- The filling tip on the anode base of a replaced lamp should be cut off in order to reduce the internal pressure of the lamp.

#### **Important Operation Notes**

- Correct polarity and burning position are critical.
- Lamp must be operated less than rated current.
- Window of the lamp should be free from bare hands or dust. In order to remove grease stains or dust, use alcohol soaked clothes.
- Replace the lamp at its life end, or when blackening becomes thicker or flickering of the output becomes severe.
- Remove the vinyl tube on the filling tip before installation.



#### **Notice**

Equipment shown in this catalog, any products using the equipment or technologies relating to the equipment fall under the category of security control relating to freight or technologies under the provisions of the Foreign Exchange and Foreign Trade Control Law. Permission needs to be obtained.

## Contents

(1) UXR-175BF (2) Heat conductive grease (3) Certificate of Inspection

## USHIO

#### **USHIO AMERICA, INC.**

5440 Cerritos Avenue, Cypress, CA 90630, U.S.A. Tel.+1 714-236-8600 Fax.+1 714-229-3180 http://www.ushio.com/

#### **USHIO EUROPE B.V.**

Skypark, Breguetlaan 16-18, 1438 BC Oude Meer, the Netherlands
Tel.+31 20-446-9333 Fax.+31 20-446-0360
http://www.ushio.eu/

#### USHIO ASIA PACIFIC PTE. LTD.

28 Genting Lane, #05-05, Platinum 28, Singapore 349585 Tel.+65 6274-5311 Fax.+65 6274-5300 http://www.ushioasiapacific.com/

#### **USHIO KOREA, INC.**

Seocho-dong, Deokheung Bldg, 14F, 363, Gangnam-daero, Seocho-gu, Seoul, 137-858 Rep. of Korea
Tel.+82 2-587-1115 Fax.+82 2-587-1118
http://www.ushio.co.kr/

#### **USHIO SHANGHAI, INC.**

Hang Seng Bank Tower, 10/F, 1000 Lujiazui Ring Road, Pudong New Area, Shanghai, 200120, P.R.C. Tel.+86 21-6841-1135 Fax.+86 21-6841-1150 http://www.ushio.com.cn/

#### **USHIO INC.**

1-6-5 Marunouchi, Chiyoda-ku, Tokyo 100-8150 Tel.+81 3-5657-1014 Fax.+81 3-5657-1030 http://www.ushio.co.jp/en/ The contents of these specifications are current as of May 2016. Product specifications are subject to change without notice for purposes of improving quality or performance.